

Manual of Electrical Installation for Pressure Probes



Edition 01/2011

Index

1. General precautions	page 2
2. Transmitters with digital output	page 2
Standard installation	page 2
Electrical connections (series MD / WD / KD / I / IJ)	page 2
3. Transmitters with amplified analog output	page 3
Standard installation	page 3
Electrical connections (series TK / TPSA / TSA)	page 3
Electrical connections (series TPFADA / TPHADA / TPSADA / TKDA)	page 4
Electrical connections (series M / W / K / I)	page 5
4. Transducers with non-amplified analog output	page 8
Standard installation	page 8
Electrical connections (series M / W / K / I)	page 8
Electrical connections (series TPS)	page 9
Electrical connections (series TPF / TPH)	page 9
5. Protection for outdoor installations of analog sensors	page 10
6. Standard reference	page 11

1. General Precautions

The system must be used only in accordance with the required protection level.

The sensor must be protected against accidental knocks and used in accordance with the instrument's ambient characteristics and performance levels.

The sensors must be powered with non-distributed networks and always at lengths of less than 30 mt.

In case of outdoor installations, follow the instructions in paragraph 5.

2. Transmitters with digital output


Transducers: Series MD / WD / KD / I / IJ

Outputs: CANopen DP404


Installation notes

- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding must be connected to the case of the 5-pin connector. On instrument/PLC side, we advise you connect the braiding without power supply (0V GND).
- To prevent interference, separate the power cables from the signal cables.

Standard installation (recommended)

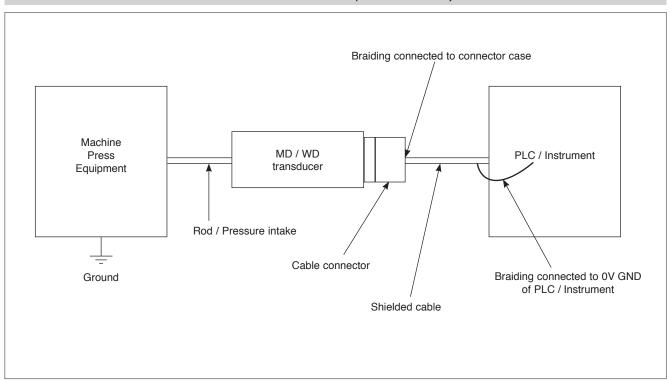

Electrical connections

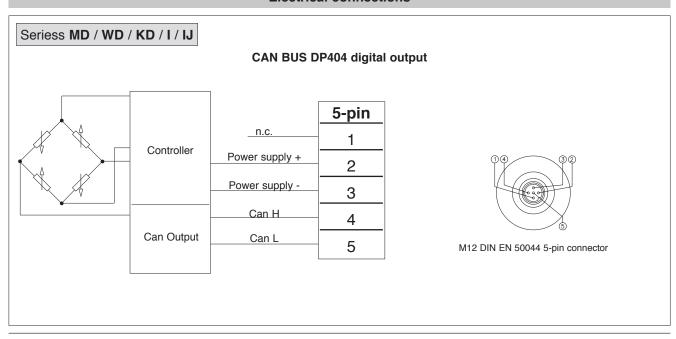

3. Transmitters with amplified analog output

Transducers: Series M / Series K / Series I / TK / TKDA / TPSADA / TSA / TPFADA / TPHADA

Outputs: 0...10V, 0...5V, 0,1...10,1V, 1V, 0,1...5V, 1V, 4...20mA, ecc...

Installation notes


- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding must be connected to the connector case. The braiding on instrument / PLC side must be left floating.
- To prevent interference, separate the power cables from the signal cables

Braiding connected to connector case Machine Press Equipment Rod / Pressure intake Cable connector Shielded cable


Electrical connections

Series TK / TPSA / TSA


Current amplified output (mod. E)

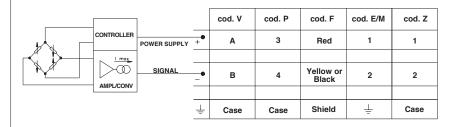

LOAD DIAGRAM (Current output)

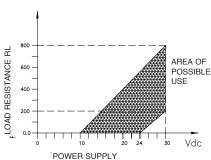


Voltage amplified output (mod. B/C/M/N/P/Q/R)

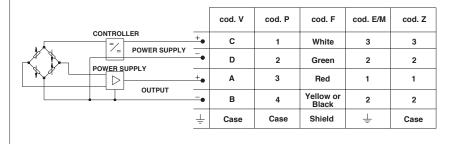


Series TPFADA / TPSADA / TKDA / TPHADA

Output amplified in current (mod. E)

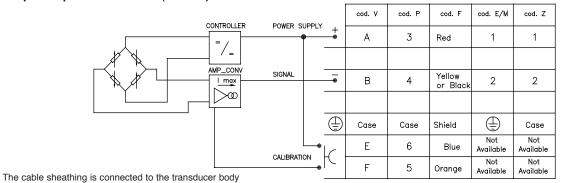


Output amplified in voltage (mod. B/C/M/N/P/Q/R)

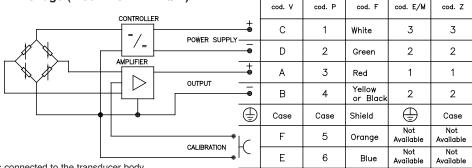

The cable sheathing is connected to the transducer body

LOAD DIAGRAM (Current output)

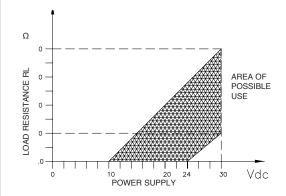

Note: The "Digital Autospan" function is activated by means of the "Calibration" contacts shown in the above diagram.

For operation and complete functions, see the user manual (downloadable on www.gefran.com).






Male connector 09-0127-09-07 Protection IP67

V - 6 pole connector



Male connector VPT02A10-6PT2 Protection IP66

Z - 4 pole male connector M12 x 1




4 pin Male connector serie 713 Protection IP67

E - EN 175301-803 Type A M - EN 175301-803 Type C-ind




4 Pin DIN Type A Protection IP65 4 Pin MicroDIN Tipo C-industrial Protection IP65

F - 2 pole cable




Shielded cable 2x0,25 - 2m. (output E) Protection IP65

F - 4 pole cable



Shielded cable 4x0,25 - 1m. (output E)
Protection IP65

F - 6 pole cable



Shielded cable 6x0,25 - 1m Protection IP65


Series M / W / K **MAGNETIC EXTERNAL** CURRENT OUTPUT (4...20mA, 2 wires) **AUTOZERO AUTOZERO** 6-pin 8-pin 6-pin 8-pin Power supply Power supply В + В Α Α CONTROLLER (10...30Vdc) (10...30Vdc) C Α C Α n.c. n.c. I max Signal Signal D В В D (4...20mA) (4...20mA) D C С D n.c. n.c. AMPL./CONV. Calibration Shunt Autozero E - F E - F E - F E - F


n c

G - H

Series I

Shield drain wire is tied to connector via cable clamp

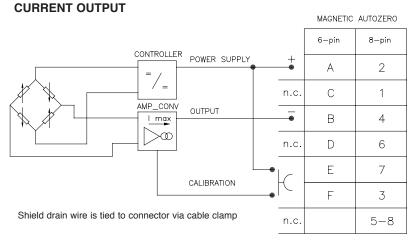


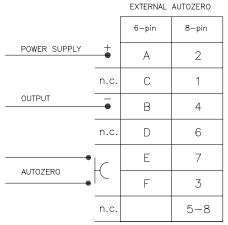


n.c.

G - H

RELAY OUTPUT (6-8 pin connector)

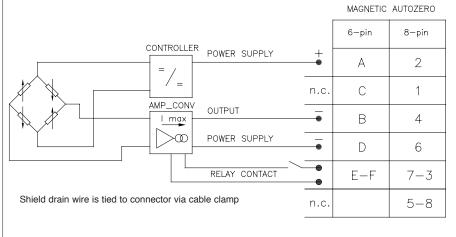

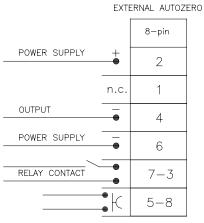


800 700 600 300 100 1011 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 Vcc (Voit)

LOAD DIAGRAM

The diagram shows the optimum ratio between load and power supply for transmitters with 4...20mA output. For correct function, use a combination of load resistance and

For correct function, use a combination of load resistance and voltage that falls within the two lines in the graph above.

Series M-W-K

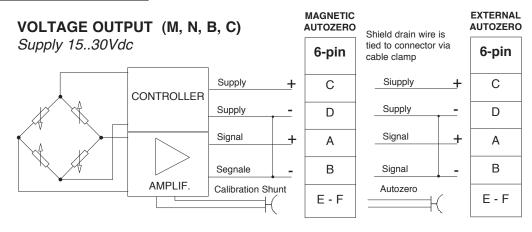

VOLTAGE OUTPUT (H, L)

Power supply -15..+15Vdc (*)

(*) The Pin B of the connector must be connected to the common of the \pm 15Vdc supply

8-pin connector Connector Connect the cable sheathing PC06A-12-88 (SR) to the side of the instrument E + Power supply В S + Signal С E - Power supply D S - Signal Е F G Н 0 R-Cal No connection

Magnetic Autozero version

- A = Excitation + (white)
- B = Signal + (red)
- C = Excitation (green)
- D = Signal (black) E = R-Cal (blue)
- F = R-Cal (brown)
- G = no connection
- H = no connection


External Autozero version

- A = Excitation + (white)
- B = Signal + (red)
- C = Excitation (green)
 D = Signal (black)
- E = Autozero (blue)
- F = Autozero (brown)
- G = no connection
- H = no connection

Series I


VOLTAGE OUTPUT (M, N, B, C)


Supply 15..30Vdc

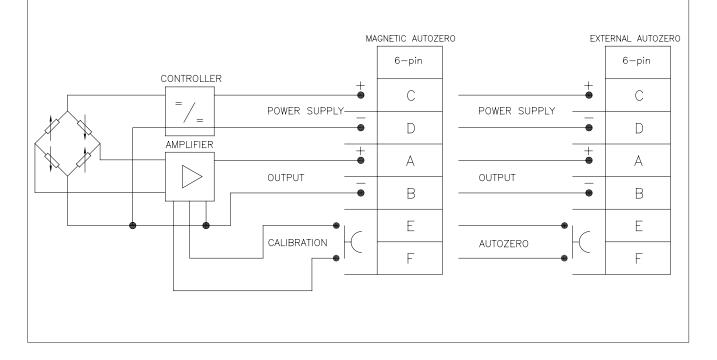

Series 17


VOLTAGE OUTPUT

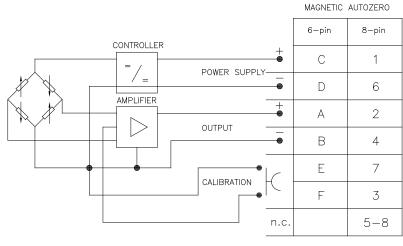


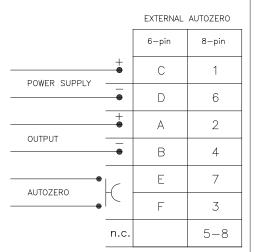


Shield drain wire is tied to connector via cable clamp


RELAY OUTPUT (6-8 pin connector)

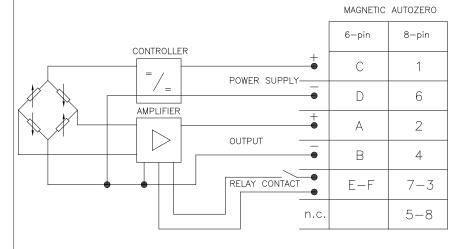

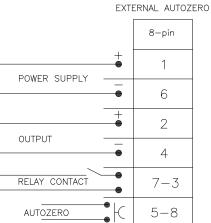







4. Transducers with non-amplified analog output


Transducers: Series M / Series W / Series K / Series I / TPS / TPF / TPH

Output: mV/V


Installation notes

- The transducer must be grounded (normally through the machine body or equipment it is installed on).
- Use a shielded cable only. The braiding on connector side must be left floating. The braiding on instrument / PLC side must be connected to the power supply GND.
- To prevent interference, separate the power cables from the signal cables

Standard installation (recommended)

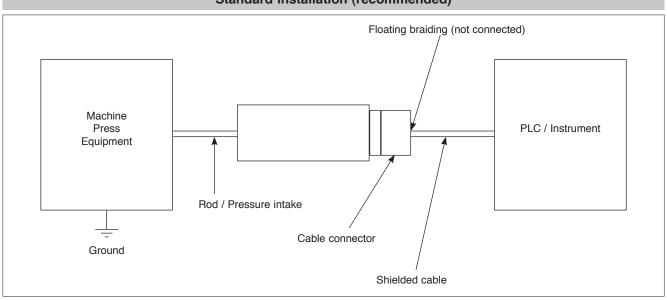


Electrical connections

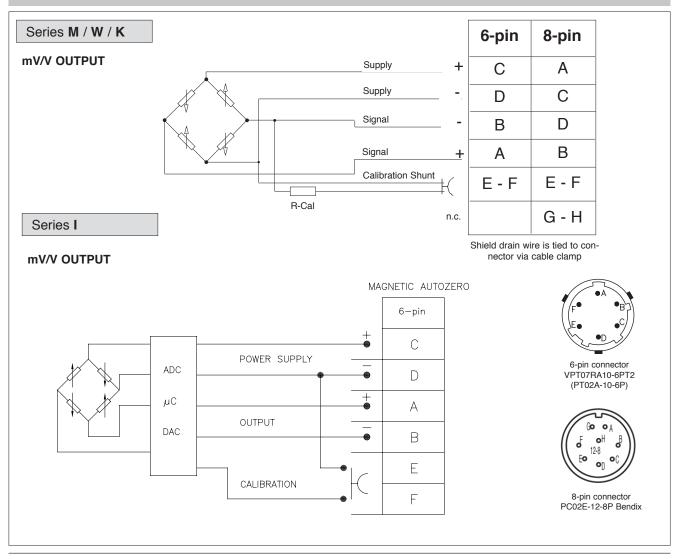

Series TPS / TPF / TPH

mV/V output

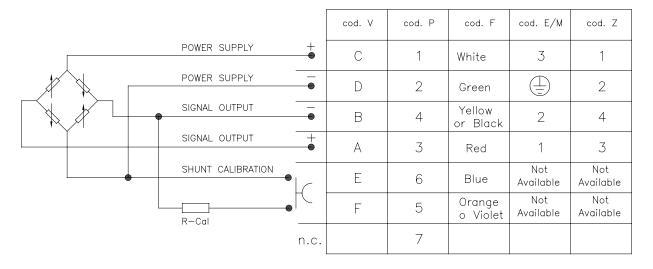


P - 7 pole connector




Male connector 09-0127-09-07 Protection IP67

V - 6 pole connector



Male connector VPT02A10-6PT2 Protection IP66

F - 6 pole cable

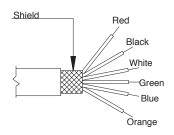

Shielded cable 6x0,25 - 1m Protection IP65

Z - 4 pole male connector M12 x 1




4 pin Male connector serie 713 Protection IP67

E - EN 175301-803 Type A M - EN 175301-803 Type C-ind



4 Pin DIN Type A Protection IP65 4 Pin MicroDIN Tipo C-industrial Protection IP65

5. Protection for outdoor installations of analog sensors

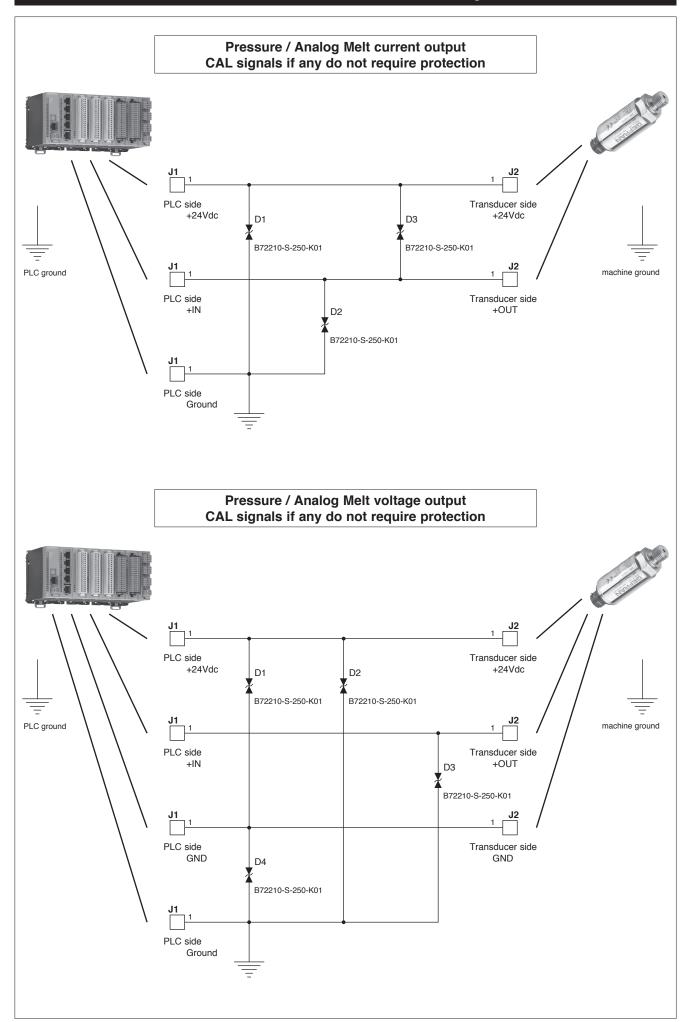

6. Standard reference

Gefran products, described in this manual, are compliant to the European Directive 2004/108/CE.

They are tested according to the standard EN 61326-1 "Electrical equipment for measurement, control and laboratory use - EMC requirements", Part 1 "general requirements and EN 61326-2-3 "Electrical equipment for measurement, control and laboratory use - EMC requirements", Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning.

Electromagnetic Compatibility (EMC) requirements are classified in two types: Emission requirements, Immunity requirements

Emission requirements

For class B equipment the limits, the measuring methods and the provisions given in CISPR11, EN 61000-3-2 and EN 61000-3-3 apply. Equipment classification and choice of respective limits shall be determined after taking into account the intended environment and emission requirement in the areas of use

Immunity requirements

The immunity test requirements are given in table 1.

The tests shall be conducted in accordance with the basic standards. The tests shall be carried out one at time.

Table 1 - Immunity test requirements for equipment intended for use in industrial locations

Port	Phenomenon	Basic standard	Test value	Performance criteria requested	Performance criteria applied by Gefran
Enclosure	Electrostatic discharge (ESD)	EN 61000-4-2	4 kV / 8 kV contact/air	В	А
	EM field	EN 61000-4-3	10 V/m (80 MHz to 1 GHz)	A	А
			3 V/m (1,4 GHz to 2 GHz)		
			1 V/m (2,0 GHz to 2,7 GHz)		
	Rated power frequency	EN 61000-4-8	30 A/m	А	A (@ 400 A/m)
	magnetic field				
Power supply DC ^{g)}	Burst	EN 61000-4-4	2 kV (5/50 ns, 5 kHz)	В	Α
	Surge	EN 61000-4-5	1 kV ^{a)} / 2 kV ^{b)}	В	В
	Conducted RF	EN 61000-4-6	3 V (150 kHz to 80 MHz)	А	A (@ 10V)
I/O signal/control	Burst	EN 61000-4-4	1 kV (5/50 ns, 5 kHz) ^{d)}	В	А
(including functional	Surge	EN 61000-4-5	1 kV ^{b), c)}	В	В
earth lines)	Conducted RF	EN 61000-4-6	3 V (10 kHz to 80 MHz)	A	A (@ 10V)

a) Line to line

Performance criterion A

During testing, normal performance within the specification limits.

Example

If electronic equipment is required to work with high reliability, the EUT shall operate without any apparent degradation from the manufacturer's specification.

Performance criterion B

During testing, temporary degradation, or loss of function or performance which is selfrecovering.

Example

During testing, an analogue function value may deviate. After the test, the deviation vanishes.

Performance criterion C

During testing, temporary degradation, or loss of function or performance which requires operator intervention or system reset occurs.

Example

In the case of an interruption in the mains longer than the specified buffer time, the power supply unit of the equipment is switched off. The switch-on may be automatic or carried out by the operator.

Copy of the conformity declaration is available for download on the Gefran web site www.gefran.com

b) Line to ground

^{o)} Only in the case of long-distance lines

^{d)} Only in the case of lines > 3 m

DC connections between parts of equipment/system which are not connected to a d.c. distribution network are treated as I/O signal/control ports